

ASSEMBLY INSTRUCTIONS MODEL : MH61900(1100X700)

IMPORTANT NOTE:


- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT TIGHTEN ALL SCREWS UNTIL THE PRODUCT IS FULLY SET-UP.

HARDWARE LIST


NO	DESCRIPTION		QTY
A		JCBC BOLT M6 X 80mm	8
B		BARREL NUT M6 X 13mm	8
C		JCBC BOLT M6 X 35mm	8
D		FLAT WASHER M6	8
E		CSK SCREW M4 X 32mm	6
F		ALLEN KEY M4	1



STEP 1

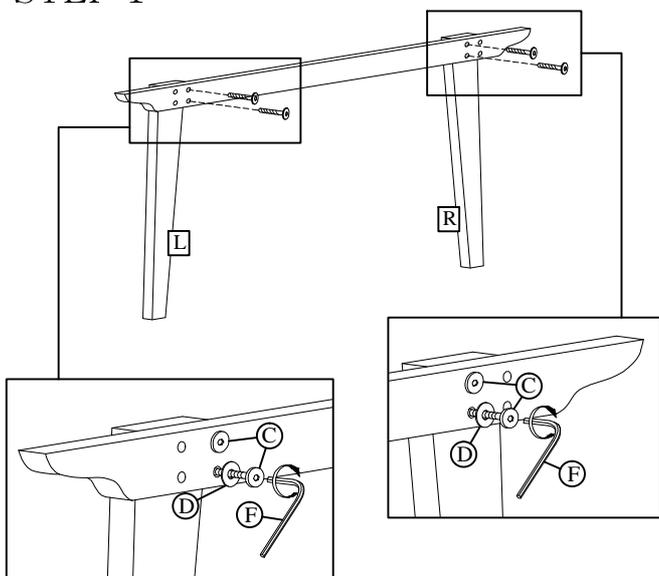

STEP 2

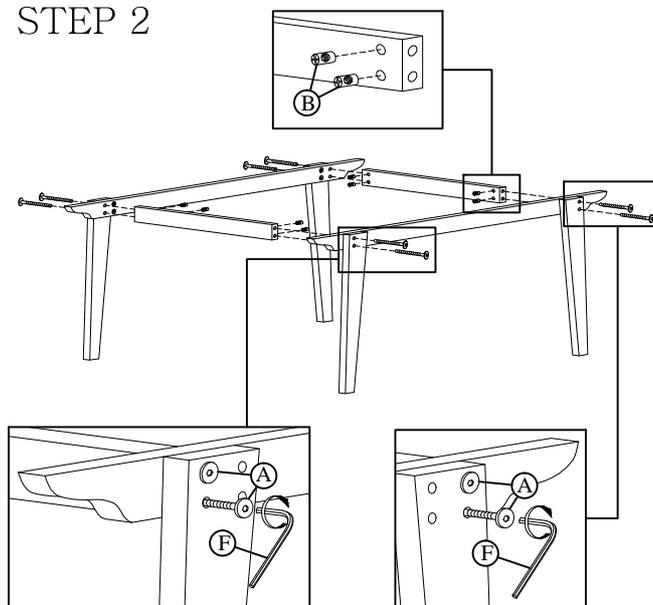

STEP 3

